



Thank you for buying your new 200 Watt Hand Blender




200 Watt Hand Blender

Model No: DUN53184

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USE, AND KEEP FOR FUTURE REFERENCE.
FOR HOUSEHOLD USE ONLY.

KNOW YOUR HAND BLENDER

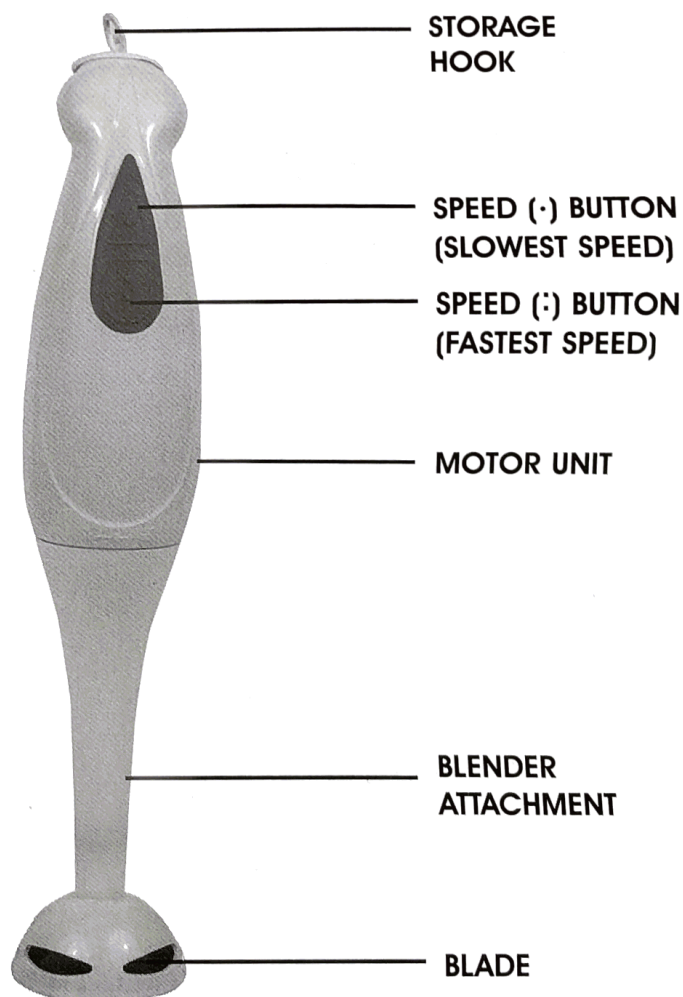

The illustrations used in these instructions may differ slightly from the actual unit supplied

PRODUCT SPECIFICATIONS (FOR INDOOR USE ONLY)

Power	175-200 Watts, Class II
Voltage	AC 220-240V
Frequency	50Hz

CLEANING & MAINTAINING YOUR HAND BLENDER

- Remove the mains plug from the mains supply before cleaning.
- Do not immerse the Motor Unit in water or any other liquid.
- Avoid the use of solvents, polish, abrasive or aerosol cleaners as they may damage the surface of the Hand Blender.
- Clean the Motor Unit by wiping with a slightly dampened soft cloth.
- Do not place the Blender Attachment in a dishwasher,
- For easier cleaning immediately after use, wash the Blender Attachment in warm soapy water. Don't let food dry on as this will make cleaning more difficult.
- Ensure the inside of the Blender Attachment is thoroughly dry before re-attaching it to the Motor Unit.
- Leave items to dry in a safe place well away from any children.

Warning: Be careful when handling the Blade Assembly as the Blades are very sharp.

IMPORTANT SAFETY INSTRUCTIONS

This appliance is not designed for use by children, or persons with reduced physical, sensory or mental capabilities, and should not be used by such persons unless they can do so safely. Where necessary, such persons (or anyone with lack of experience or knowledge) should first be given supervision or instruction concerning use of the appliance by a person responsible for their safety.

When using an electrical appliance, basic safety precautions should always be observed, including the following:

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY:

- Before using this Hand Blender, these instructions should be carefully read to ensure that the best results are obtained.
- The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur while the product is in use.
- The Hand Blender is intended exclusively for domestic use only and not for commercial use!
- Remove the mains plug from the mains supply whenever the Hand Blender is not in use, when cleaning, or storing or if a fault occurs.
- Always keep the Hand Blender out of reach of children as they are unable to recognize the hazards associated with incorrect handling of electrical appliances.
- The Hand Blender must never be used by children.
- Close supervision is necessary when the Hand Blender is in use.
- Never leave the Hand Blender unattended during use.
- When using the Hand Blender ensure that it is used on a flat, level and sturdy surface. Also check that it can take the weight of the unit during use.
- Never place your hands near the Blades of the Hand Blender while switched on.
- The use of attachments, not explicitly stated to be used with this Hand Blender, must not be used. The use of such prohibited attachments could cause personal injury or damage to the Hand Blender.
- Ensure that the mains lead is not hung over sharp edges and keep it away from hot objects and open flames.
- Do not use the Hand Blender with damp or wet hands.
- Do not remove the Blender Attachment while the Blender is working – only when the Hand Blender is unplugged from the mains supply.
- Test the Hand Blender and the cable regularly for damage. If there is damage of any kind the Hand Blender should not be used.
- Repairs to the Hand Blender should only be performed by a qualified technician.