

## ***Temporarily alter the current programmed temperature***

Press  $\wedge$  or  $\vee$  until required temperature is displayed. *This override will automatically be cancelled at the beginning of the next programmed event.*

If you are increasing the temperature you will hear a (quiet) click and the little flame will appear to tell you that the boiler has fired and the radiators will heat the room to whatever temperature you have selected.



If you are decreasing the temperature, press the down arrow until there is a (quiet) click and the little flame disappears. *This override will automatically be cancelled at the beginning of the next programmed event.*